

## Product Specifications

ST1E240D/ST1E250D | Revised September 2014



BST Detectapens are industry renowned as the highest quality choice of stationery for use in hygiene critical food processing environments. Every feature of the pen is designed with the food industry in mind, resulting in a truly unique set of properties designed to minimise contamination risks and improve food safety.

The BST Detectapen range is manufactured using our flagship XDETECT 2.0 plastic compound - optimised for metal and x-ray detection in the food and pharmaceutical industries. Our Detectapen range also incorporates silver ion antibacterial technology, which is effective against E-Coli, MRSA & Salmonella. All materials used in the construction of our pens feature extensive food contact approvals including EU & FDA compliance.

Our ECO style Detectapen has a hexagonal profile to stop the pen rolling from surfaces. All Detectapen designs feature minimal germs traps and are ergonomically designed making them easy to hold, so less likely to be dropped.

All BST Detectapens are available with or without a dual detectable clip. The clip is moulded in to the pen making it near impossible to snap off without the use of tools. All BST Detectapens feature high quality metal ink cartridges, further adding to the detectability of the pen. The Detectapen range is manufactured at the BST HQ in Doncaster, UK, where we assemble over 1.5 million units per year, destined for food manufacturers across the globe.

### Detectapen Range Advantages

- ✓ Detectable by in-line metal detection systems & x-ray inspection systems
- ✓ Incorporates antibacterial technology to protect against pathogenic germs and moulds
- ✓ Compatible with PDA touchscreen devices (*Resistive Technology*)
- ✓ Strong, durable, shatter resistant & chemically resistant material
- ✓ Compliant with EU & FDA food contact legislation, including mandatory EU migration test standards
- ✓ Available in a variety of body styles and ink types to suit specific requirements
- ✓ Can be used as part of HACCP and BRC procedures
- ✓ Displays due diligence in the prevention of foreign body contamination



# BST PDA DETECTAPEN®

FEATURING A PDA COMPATIBLE DETECTABLE NIB

PAGE 2 of 8

**Product Description:** The ECO PDA Detectapen is a great value for money detectable PDA stylus. The beautifully simple design comprises of only two components, the PDA nib and the pen body. The PDA nib is compatible with resistive touch screens such as those used on PDA devices in factories, hospitals and logistics. This nib is not compatible with capacitive touch screens (such as smart phones) which rely on human touch.

The ECO PDA pen features a hexagonal profile, which assists with grip and also stops the pen rolling on uneven work surfaces. The ECO PDA pen is also available with or without its XDETECT 2.0 clip.

Please note that the clip does not constitute an additional pen component, as clipped pens are moulded from one piece material, meaning the clip will not fall off and become a potential contaminant. The clip is also designed to bend – not snap off.

**Housing Material:** BST XDETECT 2.0

**Cartridge Material:** N/A

**Order Code:** ST1E240D [Blue PDA pen with clip]  
ST1E250D [Blue PDA pen without clip]

**Pack Size:** 10 Pack

**Pack Weight:** 0.05 Kg

**Body Colours:** Blue Only

**Ink Colours:** N/A

**Write Out Length:** N/A

**Ink Specifications:** N/A



### Food Contact Status (EU)

Hereby we declare that the material XDETECT 2.0 in various colours is manufactured in line with the relevant requirements of 2023/2006/EC on good manufacturing practice (GMP) for materials and articles intended to come into contact with food.

The raw materials used in the manufacturing process of the above mentioned materials (XDETECT 2.0 in various colours) can be considered suitable for food contact applications in terms of compliance with European regulations. The raw materials used meet the relevant requirements of EU Framework Regulation 1935/2004 on materials and articles intended to come into contact with food.

All monomers, starting substances and additives used to manufacture these grades are listed in Commission Regulation (EU) No. 10 (2011) on plastic materials and articles intended to come into contact with food. Applicable restrictions on monomers, additives etc. (SML, QM) are available on request. The finished articles are required to meet the Overall Migration Limit (OML) of 10 mg/dm(sq) or 60 mg/kg food.

Colourants used are compliant with European Council Resolution AP(89) 1 on the use of colourants in plastic materials coming into contact with food.

XDETECT 2.0 (various colours) is compliant with Directive 1895/2005/EC on the restriction of use of certain epoxy derivatives (BADGE, BFDGE, NOGE), since the latter substances are not intentionally used in the manufacturing process of XDETECT 2.0.

The following overall migration results for XDETECT 2.0 were obtained using a UKAS accredited laboratory, with overall migration simulants and conditions as detailed in EU Regulation No 10/2011.

Method	EN-1186-3 Migration into 10% v/v Ethanol (Simulant A)	EN-1186-3 Migration into 3% w/v Acetic Acid (Simulant B)	EN-1186-3 Migration into Olive Oil (Simulant C)
Replicate #1	0.5 mg/dm <sup>2</sup>	0.1 mg/dm <sup>2</sup>	2.6 mg/dm <sup>2</sup>
Replicate #2	0.7 mg/dm <sup>2</sup>	0.0 mg/dm <sup>2</sup>	2.9 mg/dm <sup>2</sup>
Replicate #3	0.8 mg/dm <sup>2</sup>	0.2 mg/dm <sup>2</sup>	3.3 mg/dm <sup>2</sup>
Replicate #4	-	-	2.7 mg/dm <sup>2</sup>
<b>Mean Result</b>	<b>0.7 mg/dm<sup>2</sup></b>	<b>0.1 mg/dm<sup>2</sup></b>	<b>2.9 mg/dm<sup>2</sup></b>
<b>EU Limit</b>	<b>10.0 mg/dm<sup>2</sup></b>	<b>10.0 mg/dm<sup>2</sup></b>	<b>10.0 mg/dm<sup>2</sup></b>

### Specific Migration of Barium:

XDETECT 2.0 samples were exposed in Simulant B (3% Acetic Acid) for 1 Hour at 40°C and the level of Barium in the extracts was determined using inductively coupled plasma mass spectrometry.

The mean result of the test was 146 µg/kg, the limit specified in EU Regulation No 10/2011 for the migration of Barium is 1.00 mg/kg (1000 µg/kg). These results were obtained by an expert independent contractor.

### Food Contact Status (FDA)

The polypropylene base resin used in XDETECT 2.0 meets the FDA (Food and Drug Administration) requirements contained in the Code of Federal Regulations – latest revision (1/4-2011) - in 21 CFR 177.1520 (a) (3) (i) , (b) and (c) (3.1a).

At the same time this base resin grade meets the FDA criteria in 21 CFR 177.1520 for food contact applications, excluding cooking, listed under conditions of use C through H in 21 CFR 176.170 (c), Table 2., and can be used in contact with all food types as listed in 21 CFR 176.170 (c), Table 1. Also the mineral additives and the pigments used are GRAS (Generally Recognized As Safe) or are FDA cleared under specific FDA citations.



## Detectapen Antibacterial Technology

Detectapen products are manufactured from XDETECT 2.0 with built in silver ion antimicrobial technology, supplied by our partners SteriTouch. This technology offers continuous protection against cross infection, reducing the risk of spreading pathogenic germs such as MRSA, E.Coli and Salmonella. The antibacterial surface protection harnesses the natural sterilising properties of silver; this protection is permanently embedded into the XDETECT 2.0 compound and will not wear off over time.

These antibacterial properties have been laboratory tested and proven to be effective against harmful bacteria and mould including but not limited to:

### Bacterium

*Bacillus Cereus*  
*Bacillus Subtilis*  
*Campylobacter*  
*Klebsiella Pneumonia*  
*Pseudomonas Aeruginosa*  
*Streptococcus Mutavs*  
*Streptococcus Pyogenes*  
*Vibri Parahaemolyticus*  
MRSA  
E.Coli  
Salmonella

### Fungus

*Aspergillus Niger*  
*Aureobasidium Pullulans*  
*Candida Albicans*  
*Cladosporium Cladosporioides*  
*Fusarium Solani*  
*Penicillium Funiculosum*

The antibacterial additive used in XDETECT 2.0 complies with the relevant requirements of Regulation 1935/2004/EC (Framework Regulation), applicable to intermediate materials (e.g. plastic powders, plastic granules or plastic flakes) and also with the relevant requirements of Regulation 10/2011/EC (PIM), applicable to intermediate materials (e.g. plastic powders, plastic granules or plastic flakes).

The monomers and additives used to produce the antibacterial additive are listed in the Union List of Authorized Substances of Regulation 10/2011/EC. Dual use additives subject to restrictions in food as defined in Regulation 10/2011/EC are not intentionally used in the manufacture of or formulation of this product.

### **Antibacterial Laboratory Testing Method:**

All testing is conducted by an independent laboratory using the JIS Z 2801:2000 test method. Where possible, all test materials are taken from samples of the actual product. Samples typically measure 50mm x 50mm as specified by the JIS Z 2801:2000 method, although where this is impractical it is permissible to use smaller samples with the method being modified accordingly.

Each test sample is inoculated with a suspension of the test organism (for example MRSA). The inoculum is held in contact with the test sample using a sterile polyethylene film. All test samples are inoculated in triplicate, with an additional three replicates of the control.

The bacterial population on three control replicates is evaluated immediately following inoculation. This is assumed to be the initial population on all test samples. The remaining samples are incubated for the test period (typically 24 hours) at 35°C, at which time the bacterial population is evaluated.

*Test Results are presented on the pages overleaf*



# BST PDA DETECTAPEN®

FEATURING A PDA COMPATIBLE DETECTABLE NIB

## Antibacterial Laboratory Testing Results:

Salmonella Results Table

Sample Material	Bacterium	CFU at 0 Hours	CFU at 24 Hours	Comparison
Control	Salmonella. enteritidis	150000	140000	N/A
BST XDETECT	Salmonella. enteritidis	150000	<10	99.999% reduction


MRSA Results Table

Sample Material	Bacterium	CFU at 0 Hours	CFU at 24 Hours	Comparison
Control	MRSA	100000	470000	N/A
BST XDETECT A	MRSA	100000	<10	99.998% reduction
BST XDETECT B	MRSA	110000	<10	99.998% reduction
BST XDETECT C	MRSA	110000	<10	99.998% reduction

E. Coli Results Table

Sample Material	Bacterium	CFU at 0 Hours	CFU at 24 Hours	Comparison
Control	E. Coli	140000	11000000	N/A
BST XDETECT A	E. Coli	140000	<10	99.999% reduction
BST XDETECT B	E. Coli	140000	<10	99.999% reduction
BST XDETECT C	E. Coli	140000	<10	99.999% reduction


Salmonella Results Graph

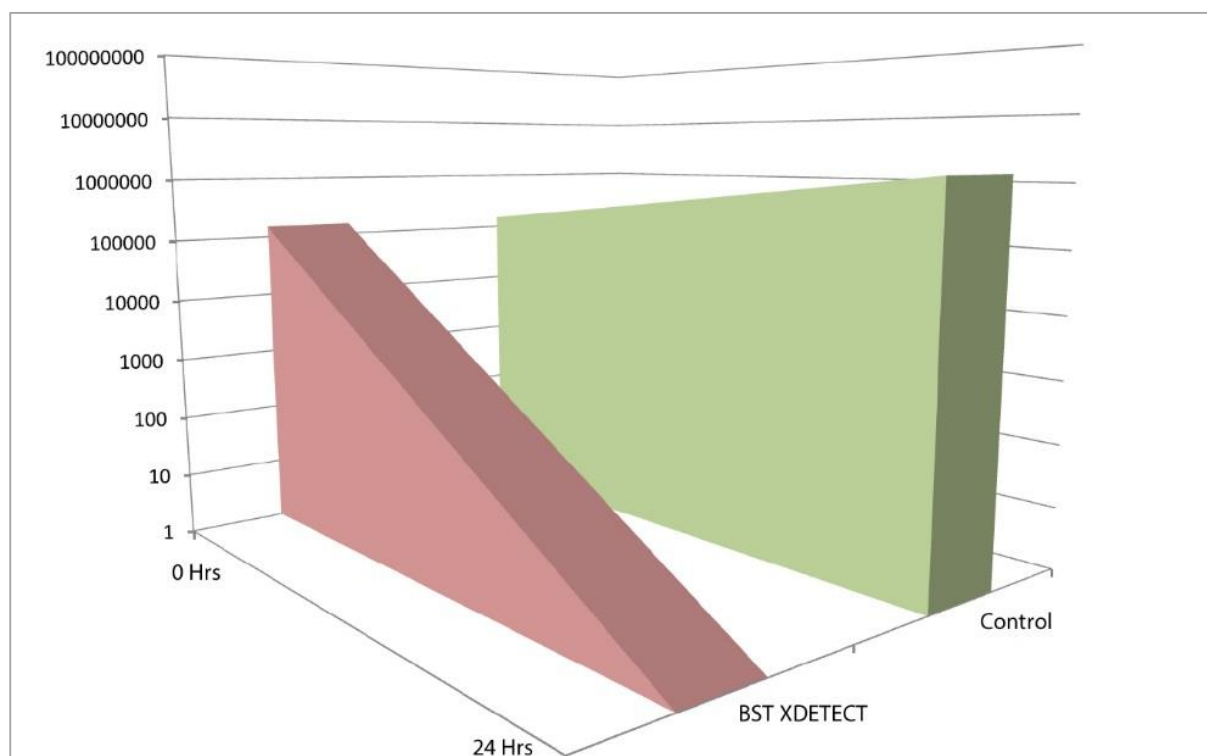


# BST PDA DETECTAPEN®

FEATURING A PDA COMPATIBLE DETECTABLE NIB

MRSA Results Graph

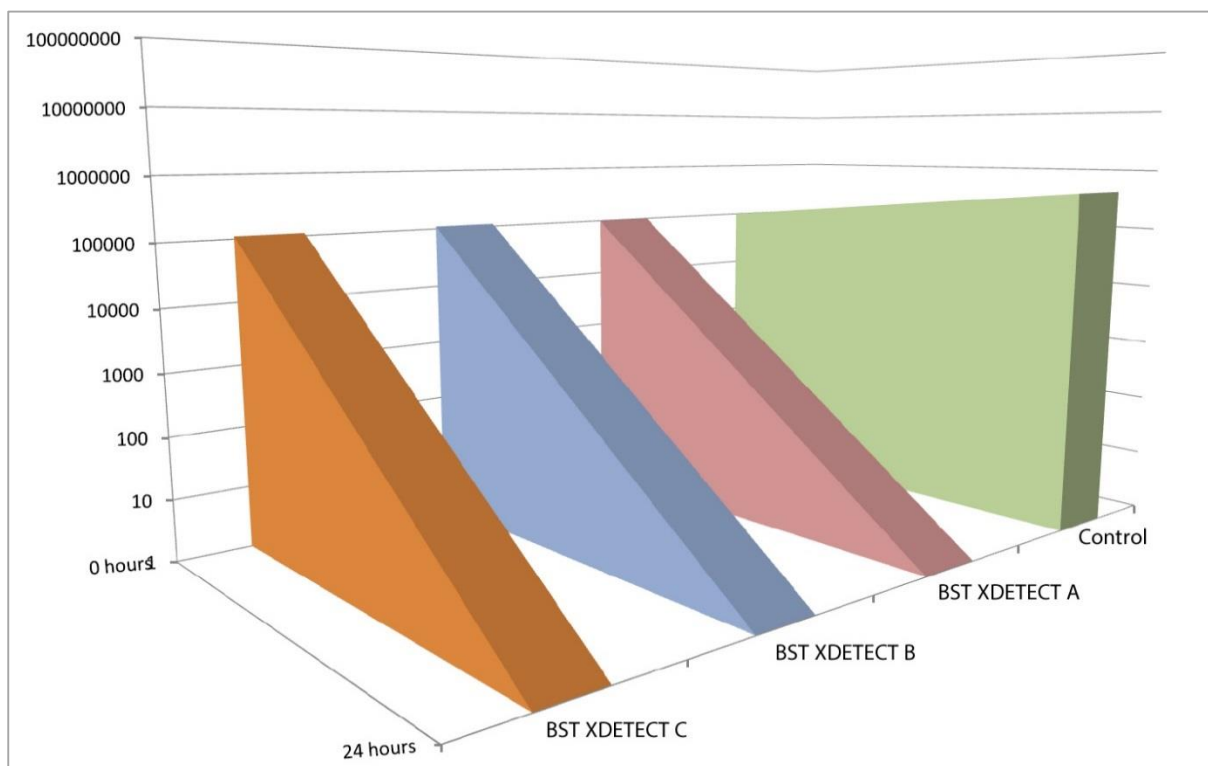

E. Coli Results Graph

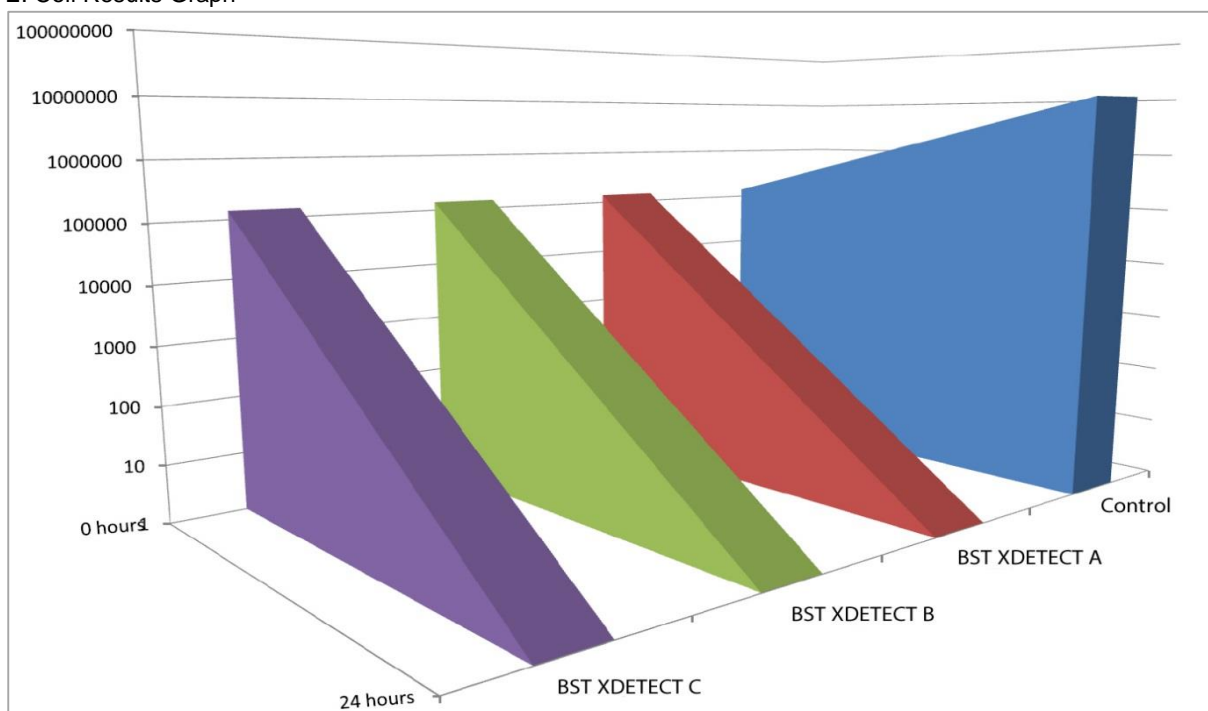

# BST PDA DETECTAPEN®

FEATURING A PDA COMPATIBLE DETECTABLE NIB

PAGE 7 of 8

## Detectapen Metal Detectability

BST ECO PDA Detectapens are made using XDETECT 2.0, an electromagnetically detectable and x-ray visible plastic compound. Within the pen housing is a brass ink cartridge. The metal detectability of this product will vary based on, but not limited to:

- Calibration Levels
- Product Type (E.g. Wet, Dry, Frozen, Liquid)
- Aperture Dimensions
- Orientation

Orientation is a highly influential factor for the metal detectability of a contaminant that is non spherical, i.e. it will be easier to detect the contaminant when passing in one orientation compared to another - this is known as the orientation effect.

During testing of the BST Detectapen we used a worst case scenario which is through the geometric centre of the aperture and in the worst case orientation.

For ease of calibration, we have equated the full pen and pen parts to their ferrous ball test piece equivalents, which are widely used for metal detector testing and calibration. UKAS accredited test pieces are available to purchase from BST Detectable Products.

Component	Dimensions	Worst Case Orientation	Test Piece Recommended	Engineer Notes
Full Pen	146 (L) x 12 (Ø) mm	Short Edge Leading	5.00 mm	If the on-site detector is detecting 5.0mm ferrous or smaller, then it will detect the pen regardless of orientation.
Pen Housing	146 (L) x 12 (Ø) mm	Short Edge Leading	2.0 mm	If the on-site detector is detecting 2.0mm ferrous or smaller, then it will detect the pen housing regardless of orientation.
Pen Clip	17 x 6 x 2 mm	Short Edge Leading	1.0 mm	If the on-site detector is detecting 1.0mm ferrous or smaller, then it will detect the pen clip regardless of orientation.

***Please note that the pen clip cannot be detached from the pen without extreme force or the use of tools. Generally speaking, the only circumstances where by such a small pen component could be introduced to food product would be through deliberate action or the pen going through an extreme process such as crushing, blending, mincing etc.***

**Please note that the above advice is based on J800 / P950 Detectapen models. ECO Detectapens are smaller than standard Detectapens, therefore contain less detectable material. We highly recommend that you test our products at your site with your detection system prior to use.**

The above table is based on our own testing using one type of metal detector, and is supplied purely for customer convenience. Different metal detectors will feature different sensitivity settings, as well as settings for different product types (E.g. Wet, Dry, Frozen, Liquid).

For this reason BST recommend that all our products be thoroughly tested on your metal detection systems by a trained and certified professional. It may be the case that your equipment needs to be recalibrated in order to reliably detect this product. Such a professional should be available by contacting the manufacturer of your metal detection system.



## Detectapen X-Ray Visibility

In contrast to metal detection, x-ray visibility is determined by material density. For this reason, XDETECT 2.0 contains an additional, evenly dispersed, food safe, high density additive.

Based on our experience and testing, positive readings should be consistent both for whole pens and XDETECT 2.0 fragments as small as 5mm. X-ray detection performance will be reduced when small fragments are buried in deeper, denser products - detection will depend on product type and density.

Figure 1 shows an empty Detectapen body (top) and an empty ECO Detectapen body (bottom) through a popular x-ray inspection system, inside a packaged garlic bread product. Figure B shows a 5mm XDETECT 2.0 fragment inside the same product and through the same system.

We highly recommend that all our products be thoroughly tested on your x-ray inspection systems by a trained and certified professional. It may be the case that your equipment needs to be recalibrated in order to reliably detect this product. Such a professional should be available by contacting the manufacturer of your x-ray inspection system.

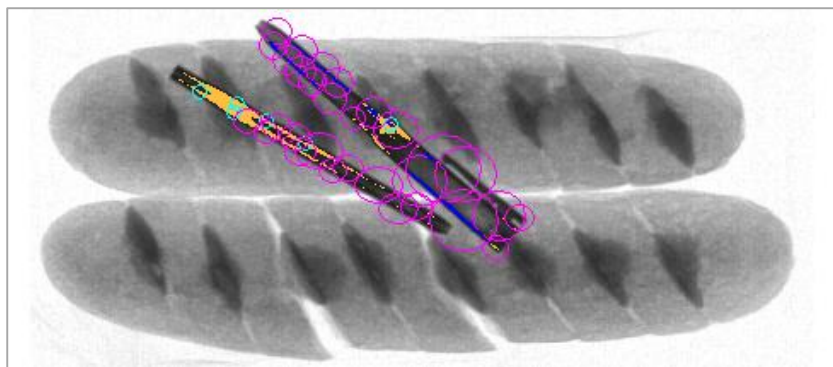


Figure 1

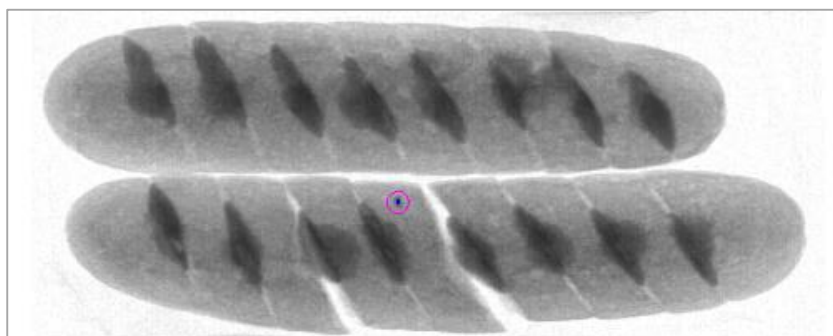


Figure 2

## DISCLAIMER

The information provided in this product specification sheet is based on our experience and knowledge to date and we believe it to be true and reliable. This information is intended as a guide for your use of our products, the use of which is entirely at your own discretion and risk. We, BS Teasdale & Son Ltd, cannot guarantee favourable results and assume no liability in connection with the use of our products.

© 2014 BS Teasdale & Son Ltd. All Content, Data & Images are owned by BS Teasdale & Son Ltd and are protected by international copyright law.